


Triangle
Ramp down \ Saw To Waveshaper
Pulse
Give
Spaced Saw
Pulse
Pulse width

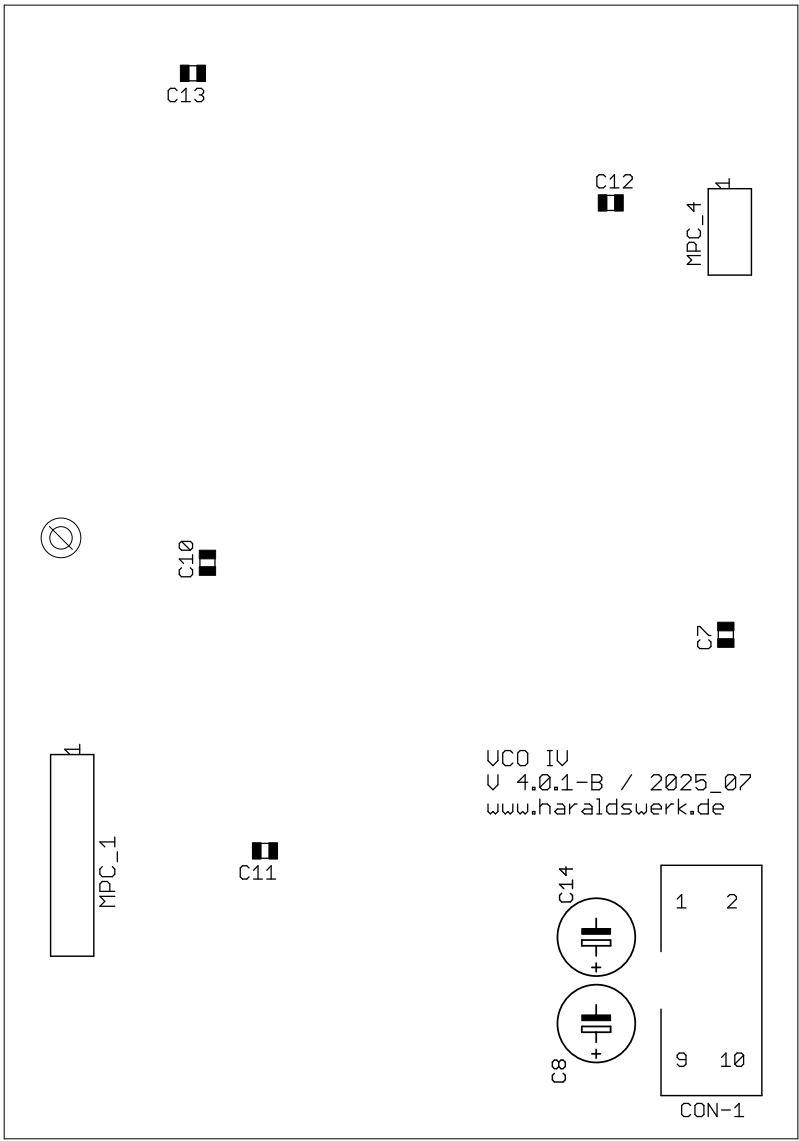

VCC0
FL in
SVC
+VCC
-VCC
GND
+VCC